

Locker Lock Quick User Guide For TM-91

General Information and Term

- ❖ Master code can be up to 6 digit (Override the user code, can be set to all the locks)
- ❖ Master ibutton Key (Order directly from fanufactory, can open all the locks in the facility)
- ❖ Management Setup key ibutton Key (Order directly from manufactory, will set secure code to each lock)
- ❖ User iButton Key (Electronic key to open the assigned lock)
- ❖ User code = 4-10 digits. (Random access code)

Fig 1.



How to Set Up Lock

When receive the lock, it's all in manufactory default setting. Use the following steps to setup lock before use it.

- Push the Reset Button (Shown in the Fig 2)
- Touch the Setup iButton Key to the reader
- You will hear two beeps with green light
- Setup completed.
- Use the Master iButton Key to open the lock, confirm the completion

How to add user key (D1990)

- Touch Master key on the lock reader 3 times until green light stay on **** (1st - green light on, 2nd - green light off, 3rd - green light on)****
- Touch user key one by one while green light on if more than one
- Now, you can use key to open & close the lock

How to Delete Individual User Key

- Touch Master key 4 times till "Red Light" on
- Touch user key with 2 beeps (wait until led goes off)

How to Delete All User Key

- Touch Master key 5 times till "Red light" on, continuing touch 4 more time with 3 beeps

Fig 2.

