

Key Assignment for RF lock:

Assign Master Key:

1. First Time setup: load the batteries and scan any RF card in front of the lock reader, green light flashing with one short beep.
2. To replace the existing master card, scan master card 3 times will delete all user cards. Scan any RF card will become master card.
3. Press reset button and scan any RF card.

Assign User Key:

- Scan the master card once, green light flashing and one short beep then scan the RF user card one by one while the green light is flashing (up to 500 user cards can be assigned to one lock)

Delete all Keys (including Master & User keys):

- Make new master key will delete all the current cardholders (follow the Assign Master Key procedure 2.)

Change Mode: (lock or unlock)

- Scan any user card 3 times after long beep to keep the door unlock
- Scan user card again to resume to normal status (lock) after 2 short beep while red light flashing.